


Changing the Vaporizer

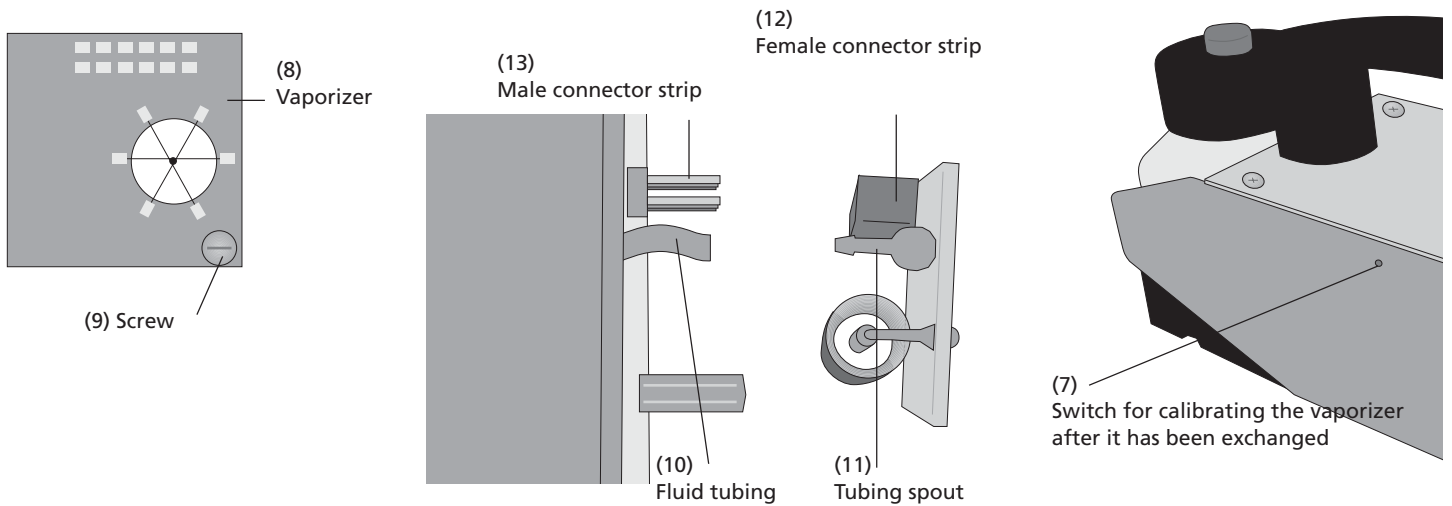

1 Removal of the Vaporizer

- Put out the battery,
- Remove the stainless steel hood by unscrewing the two screws (4) with a suitable screwdriver (No. 1. Phillips),
- Unscrew the little screw (9) at the vaporizer (8),
- Slide out the vaporizer (8),
- Remove the blue fluid tubing (10) from tubing spout (11) of the vaporizer. In case the tubing does not come off, you can pull it down with a pair of pliers or a similar tool.

2 Installation of the Vaporizer

- Plug the blue fluid tubing (10) onto tubing spout (11) of the new vaporizer
- Plug the female connector strip (12) of the vaporizer into the male connector strip (13) of the unit
- Screw in the little screw (9) at the vaporizer
- Check the connections once again and make sure that the fluid tubing is not twisted or bent
- Fasten the stainless steel hood with the two screws (4)

3. Calibration of the Vaporizer

Since all evaporators have different electrical qualities, the TINY COMPACT must be calibrated after every exchange of the vaporizer.

IMPORTANT: During the calibration process the vaporizer temperature must be at 20° C. **Never start fogging before the calibrating process.** Too cold or too warm units must first adapt to the room temperature (20° C).

- With a pen or a similar item push and hold the concealed button which you will find beside the socket for connecting the receiver of the radio remote control (7)
- Insert the battery simultaneously. The yellow LED (battery status display) lights up briefly.
- The calibration process is now completed.